



## SS-3300-ADPT-TXX-XX FPT

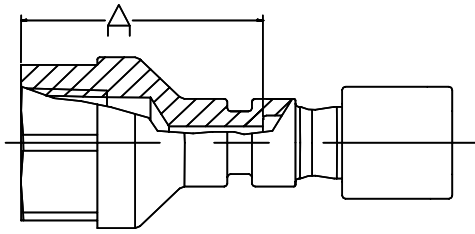

Fitting Size TXX-XX FPT	Piece Number	Take - Out, A	Across Flats	Thread
T04-1/4	9062183	1.11	0.75	1/4 - 18 NPT

\*Thread conforms to female NPT


## SS-3300-ADPT-TXX-XX MPT

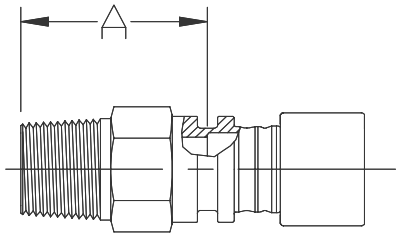

Fitting Size TXX-XX MPT	Piece Number	Take - Out, A	Thread NPT
T04 - 1/4	9062184	1.47	1/4 - 18
T08 - 3/8	9061820	1.07	3/8 - 18

\*Thread conforms to male NPT


## SS-3300-ADPT-TXX-XX SAE

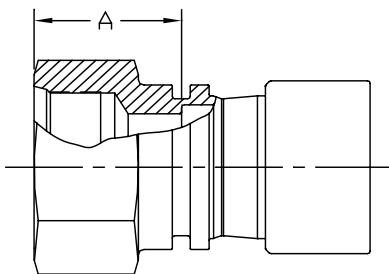

Fitting Size TXX-XX SAE	Piece Number	Take - Out, A	Across Flats	Thread
T08-0.50	9041894	1.09	1.13	3/4 - 16 UNF
T14-0.875	9061826	1.28	1.44	1-3/16-12 UN


\*Thread conforms to SAE J1926/1

## SS-3300-ADPT-TXX-XX SW

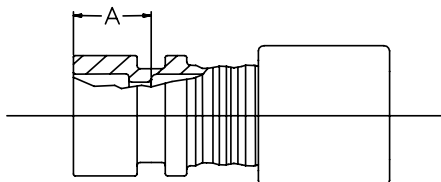


Fitting Size TXX-XX SW	Piece Number	Take - Out, A
T08 - 0.50	9061937	0.44

## SS-3300-ADPT-TXX-TYY

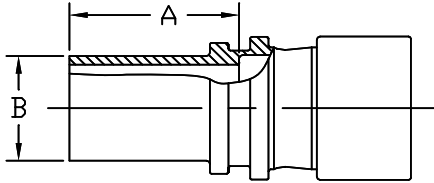

Fitting Size TXX-TYY	Piece Number	Take - Out, A	Dia B
T08 - 0.38	9061952	2.00	0.38

## SS-3300-ADPT-XXF-YYM

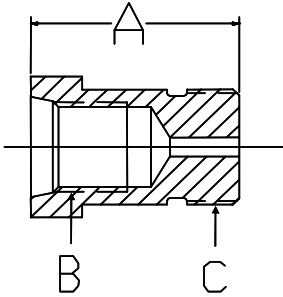


Fitting Size TXX	Piece Number	Take - Out, A	Thread B	Thread C
n/a	9062255	0.98	7/16 - 20 UNF	9/16 - 18 UNF

\*Thread C conforms to SAE J1926/1

Thread B conforms to SAE J1926/2


## SS-3300-ADPT-XXM-YYM

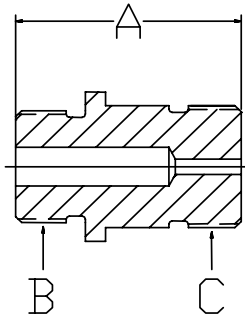

Fitting Size TXX	Piece Number	Take - Out, A	Thread B	Thread C
n/a	9062187	1.15	7/16 - 20 UNF	9/16 - 18 UNF


\*Thread B & C conform to SAE J1926/1

## SS-3300-REDB-TXX-XX NPS

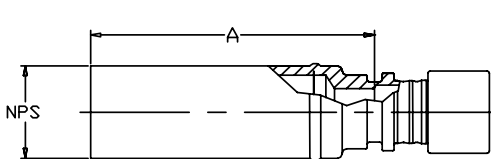

Fitting Size TXX-XX NPS	Piece Number	Take - Out A
T12-3/4	9061838	2.82
T12-1	9061918	3.89

## SS-3300-REDB-TXX-TYY

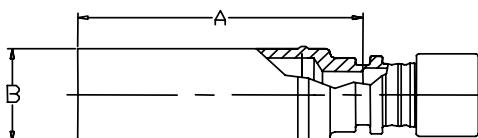

Fitting Size TXX-TYY	Piece Number	Take - Out, A	Dia, B
T08-T04	9061904	1.78	0.50
T08-T06	9061902	1.77	0.50